

NS212 SERIES CONNECTOR

NS212 Series couplings were built on the company's proven platform of non-spill valves designed to provide fast, safe and leak-free fluid line connections. The NS212 is an easy, twist-to-connect coupling with an integrated locking mechanism and double-sided non-spill shutoff valves. It is also chemically resistant and ideal for a diverse range of applications including printing and ink management, analytical instrumentation, electronic cooling and chemical handling. NS212 couplings provide high-flow fluid transfer in a small footprint.



SPECIFICATIONS

PRESSURE:

Vacuum to 45 psi, 3.1 bar

TEMPERATURE:

32°F to 120°F (0°C to 49°C)

MATERIALS:

Main components: Glass-filled polypropylene

Valve spring: 316 stainless steel

Seal material:

EPDM (FKM/Simriz® FFKM optional)

COLOR: Gray with black accent standard

TUBING SIZES:

1/8" and 1/4" ID, 3.2mm and 6.4mm ID

SPILLAGE: <0.025 cc/disconnect

INCLUSION: 0.009 cc/connect

WARNING: Pressure, temperature, chemicals, and operating environment can affect the performance of couplings. It is the customer's responsibility to test the suitability of CPC products in their own application conditions.



cpcworldwide.com/NS212

FEATURES

Efficient, non-spill design

Multiple seal materials

Twist-to-connect locking

Compact design

Ultra low air inclusion

BENEFITS

Disconnect under pressure with no spills


Broad chemical compatibility for diverse applications

Easy, non-spill connections in tight spaces


High flow in a small connector

Minimizes contaminants, reduces the need to purge lines

NS212 WATER FLOW

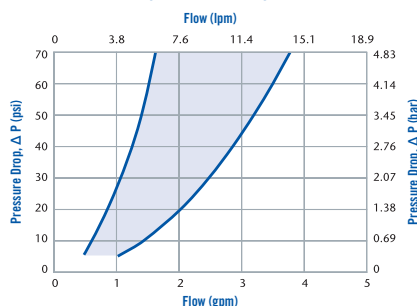

NS212 Pressure Range

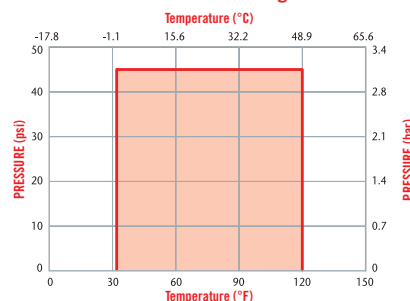

These graphs are intended to give you a general idea of the performance capabilities of each product line. The shaded area of each graph represents the operating range of the product family, i.e., upper and lower values are shown. Therefore, depending on the exact coupling configurations selected, you can reasonably expect values to fall within the shaded area.



COLDER PRODUCTS COMPANY

U.S.A.

PHONE: +1 (651) 645-0091

TOLL FREE: +1 (800) 444-2474

E-MAIL: info@cpcworldwide.com

COLDER PRODUCTS COMPANY GMBH

Germany

E-MAIL: cpcgmbh@cpcworldwide.com

DOVER (SHANGHAI) INDUSTRIAL CO., LTD

ShangHai, China


PHONE: +86 21 2411 2666

TOLL FREE: +86 400 990 1978


E-MAIL: asiapacific@cpcworldwide.com

NS212 SERIES DIMENSIONS

COUPLING BODIES - Polypropylene

	TERMINATION	TUBING/THREAD SIZE	METRIC EQ.	SHUTOFF	A	B
	IN-LINE PIPE THREAD	1/8" NPT		NS2D100212	0.71 (18.0)	1.74 (44.2)
	IN-LINE FERRULELESS POLYTUBE FITTING, PTF†	1/4" OD, .17 ID	6.4mm OD, 4.3mm ID	NS2D130412	0.71 (18.0)	1.87 (47.5)
	IN-LINE HOSE BARB	1/8" ID	3.2mm ID	NS2D170212	0.71 (18.0)	1.87 (47.5)
		1/4" ID	6.4mm ID	NS2D170412	0.71 (18.0)	2.05 (52.1)
	PANEL MOUNT FERRULELESS POLYTUBE FITTING, PTF†	1/4" OD, .17 ID	6.4mm OD, 4.3mm ID	NS2D120412	0.88 (22.4)	1.87 (47.5)
	PANEL MOUNT HOSE BARB	1/8" ID	3.2mm ID	NS2D160212	0.88 (22.4)	1.79 (45.5)
		1/4" ID	6.4mm ID	NS2D160412	0.88 (22.4)	2.05 (52.1)


COUPLING INSERTS - Polypropylene

	TERMINATION	TUBING/THREAD SIZE	METRIC EQ.	SHUTOFF	A	B
	IN-LINE PIPE THREAD	1/8" NPT		NS2D240212	0.64 (16.3)	1.27 (32.3)
	IN-LINE FERRULELESS POLYTUBE FITTING, PTF†	1/4" OD, .17 ID	6.4mm OD, 4.3mm ID	NS2D200412	0.64 (16.3)	1.39 (35.3)
	IN-LINE HOSE BARB	1/8" ID	3.2mm ID	NS2D220212	0.64 (16.3)	1.32 (33.5)
		1/4" ID	6.4mm ID	NS2D220412	0.64 (16.3)	1.52 (38.6)

ACCESSORIES

DESCRIPTION	MATERIAL	PART NO.
PANEL MOUNT GASKET REPLACEMENT: FOR SEALING PANEL MOUNT BODIES LISTED ABOVE	Buna-N	1830300

PRODUCT DIMENSIONS

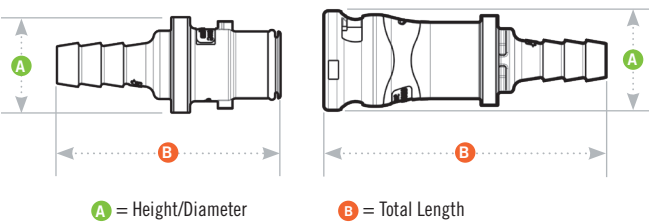

PANEL DIMENSIONS

	PANEL OPENING	PANEL THICKNESS MAX.-MIN.
COUPLING BODIES	see drawing	0.30–0.05

